

INSTALLATION GUIDE for WOOD/SHEET-ROCK CEILINGS

STEP 1 - Determine the installation location and the mounting method (Wood Screws vs Drop Ceiling Clips) to be sure you are looking at the right page of this install guide.

STEP 2 - If you will mount into a wood ceiling, use the wood screws by disassembling the end of the Adjustable Suspension Cable that attaches to the ceiling and inserting the wood screw through it (see Figure 2) and into the wood. For Sheet-rock you will need to pre-drill a hole in the sheet rock, insert the wall anchors, before attaching the wood screws.

STEP 3 - The Adjustable Suspension Cable allows you to control the length of the cable from both ends (for wood or sheet rock ceilings) to adjust the height of the Clear-Guard. Compress the clamp cylinder and pull the cable through until it reaches the desired length (see Figure 3).

STEP 4 - Unroll the Flexible PVC Panel and attach the Edge Lock Rubber Trim (4 sections) to the four corners of 48" edge of the PVC panel, (as shown in figure 4a) by sliding the Edge Lock Rubber Trim sections on horizontally (as shown in figure 4b)

STEP 5 - Insert the 48" edge of the PVC panel (with the Edge Lock Rubber Trip installed) into the Clear-Guard Aluminum profiles, and snap them shut. If you wish to reduce the size (width x height) of the Clear-Guard Hanging Separation Screen it is possible to do by cutting to length the Clear-Guard Aluminum Profiles using a shop saw, chop saw, or simple hacksaw to match the desired width of the Hanging Separation Screen you want. You can cut the Flexible PVC Panel to adjust the height or width using a simple utility knife (using a straight edge) or scissors.

STEP 6 - Attach the lower end of the Adjustable Suspension Cable to the top Clear-Guard Aluminum Profile using the two hanging clips provided. See figure 6.

STEP 7 - Make the final height adjustment and cut off any excess cable with wire snips.



PARTS LIST



Drop Ceiling Clips (2)



 
Wood Screws (2)



Wall Anchors (2)



Adjustable Suspension Cables (2)



Clear-Guard Aluminum Profiles (2)



Flexible PVC Panel (1)



Edge Lock Rubber Trim (4)

Figure 2



Figure 3



Figure 4a


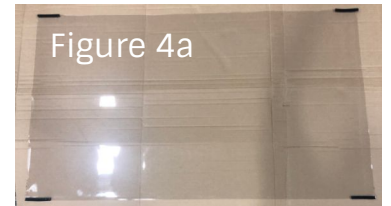 


Figure 4b

 

Figure 6

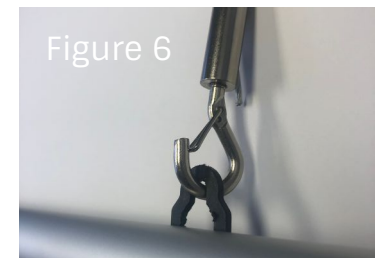

INSTALLATION GUIDE for DROP CEILINGS

STEP 1 - Determine the installation location and the mounting method (Wood Screws vs Drop Ceiling Clips) to be sure you are looking at the right page of this install guide.

STEP 2 - If you will mount into a drop ceiling, we will start by creating a looped end of the Adjustable Suspension Cable that attaches to the drop ceiling clip. Pull the exposed end of the cable until approximately 7 to 8 inches of cable is exposed (see figure 2)

STEP 3 - Create a cable loop by inserting exposed cable end back through the top and out through the side of the Adjustable Suspension Unit (see figure 3).

STEP 4 - Insert exposed cable into the bottom of the Adjustable Suspension Unit. To do this, compress the clamp cylinder either with your finger or flat-head screwdriver. While the cylinder is compressed, insert exposed end into the clamp. (see figure 4).

STEP 5 - Release the clamp cylinder and remove any remaining slack by pulling the cable loop.

STEP 6 - Squeeze Drop Ceiling Clips and slide cable loop through so that the loop is in the circular portion of the clips (see figure 6).

STEP 7 - Attach Clips to Drop Ceiling Supports by squeezing the clips and then releasing when they are in your desired position. (see Figure 7).

STEP 8 - The Adjustable Suspension Cable allows you to control the length of the cable from the lower end (for drop ceilings) to adjust the height of the Clear-Guard. Compress the clamp cylinder and pull the cable through until it reaches the desired length (see Figure 8).

STEP 9 - Unroll the Flexible PVC Panel and attach the Edge Lock Rubber Trim (4 sections) to the four corners of 48" edge of the PVC panel, (as shown in figure 9a) by sliding the Edge Lock Rubber Trim sections on horizontally (as shown in figure 9b)

STEP 10 - Insert the 48" edge of the PVC panel (with the Edge Lock Rubber Trim installed) into the Clear-Guard Aluminum profiles, and snap them shut. If you wish to reduce the size (width x height) of the Clear-Guard Hanging Separation Screen it is possible to do by cutting to length the Clear-Guard Aluminum Profiles using a shop saw, chop saw, or simple hacksaw to match the desired width of the Hanging Separation Screen you want. You can cut the Flexible PVC Panel to adjust the height or width using a simple utility knife (using a straight edge) or scissors.

STEP 11 - Attach the lower end of the Adjustable Suspension Cable to the top Clear-Guard Aluminum Profile using the two hanging clips provided. See figure 11.

STEP 12 - Make the final height adjustment and cut off any excess cable wire snips.

PARTS LIST



Drop Ceiling Clips (2)



 
Wood Screws (2)



Wall Anchors (2)



Adjustable Suspension Cables (2)



Clear-Guard Aluminum Profiles (2)



Flexible PVC Panel (1)



Edge Lock Rubber Trim (4)

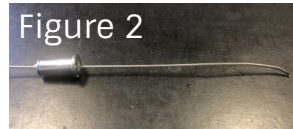 


Figure 2

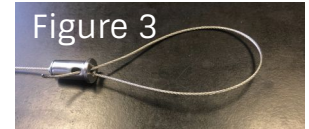 


Figure 3



Figure 4

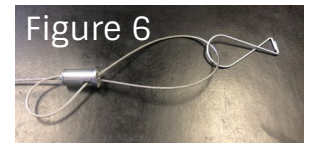 


Figure 6



Figure 7

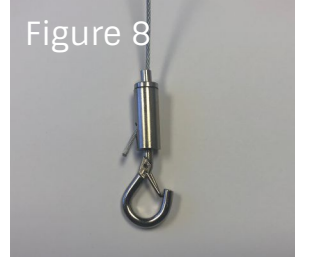 


Figure 8

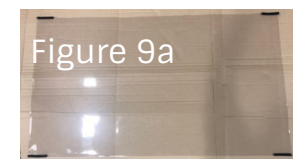 


Figure 9a

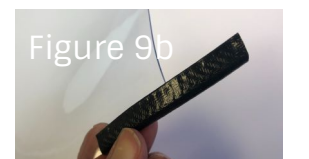 


Figure 9b



Figure 11